OLIFE

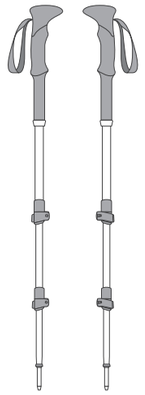

Beamwalk T3

Thank you for purchasing this Olife product. Please read this manual carefully before use and keep it for future reference!

PACKAGE CONTENTS

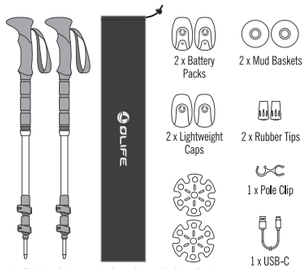

SPECIFICATIONS

LIGHTING

HIGH	120 lumens	3 h
LOW	30 lumens	13 h
RED	10 lumens	9 h
FLASHING RED	10 lumens	30 h

IPX6	1.5 m	Rechargeable Lithium Polymer Battery Pack (1300mAh 3.7V)	Working Temperature 0–45 °C

** Above data are tested per ANSI/NEMA FL 1-2009 standard in Olight's labs for reference.*

TREKKING POLES

MATERIALS	
Shaft Construction	7075 Aluminum Alloy
Grip Material	EVA

SPECIFICATIONS	
Pole Type	Telescoping
Grip Extension	Yes
Adjustable	Yes
Locking Mechanism	External Lever Lock
Gender	Unisex

DIMENSIONS	
Usable Length	39.4–53.1 in (100–135 cm)
Collapsed Length	25.6 in (65 cm)

WEIGHT	
Weight (Pair)	19.2 oz (544 g) with Lightweight Caps Only 21.5 oz (610 g) with Battery Packs Only

EN INSTRUCTIONS FOR USE

CHARGING

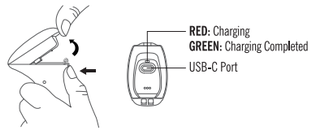

Press the button below the battery pack, and then remove the battery pack. Plug in the USB-C charging cable to start charging.
Charging Time: 4 hours

LIGHTWEIGHT CAPS

Can be used in place of the battery packs if you want to save weight.

MOTION MODE

2 light colors; 4 light settings; 30-second standby function; memory function

ACTIVATING

With the light off, short press the top button to turn on the light and enter this mode.

TURNING OFF

Short press the top button to exit this mode and turn off the light.

SWITCHING BETWEEN SETTINGS



- With the light on, press and hold the top button to cycle through 4 light settings: Neutral White (Low) – Neutral White (High) – Red – Flashing Red. Release the button once it reaches the desired setting.
- The light will blink red (20 milliseconds on & 2 seconds off) after 30 seconds of no movement, and then it will return to the last light setting used once movement is detected again.
- Memory Function: Next time you enter this mode, it will default to the last light setting used.

CONSTANT MODE

Neutral white light only; stepless dimming; memory function

ACTIVATING

With the light off, long press the top button to turn on the light and enter this mode.

TURNING OFF

Short press the top button to exit this mode and turn off the light.

ADJUSTING THE BRIGHTNESS

- With the light on, press and hold the top button to steplessly adjust the brightness. Release the button once it reaches the desired brightness level. Each long press will reverse the brightness cycle from low to high or high to low.
- It will flash once to signal that the light has reached the highest or lowest brightness level.
- Memory Function: Next time you enter this mode, it will default to the last brightness level used.

SWITCHING BETWEEN MODES

Short press to turn off the light and exit the current mode; then activate either of the two modes as previously instructed.

TREKKING POLES



DEPLOYING

1. Open the lever and pull out the shaft section until it reaches your desired length.
2. "Snap" the lever closed firmly.

COLLAPSING

1. Open the lever and collapse the shaft section fully into the section above.
2. "Snap" the lever closed firmly.

ADJUSTING CLAMPING TENSION



1. Open the lever.
2. Turn the adjustment knob clockwise to increase clamping tension or counterclockwise to reduce it.

HOW TO HOLD A TREKKING POLE



1. Put your hand up through the bottom of the strap loop, and then pull the strap down and grab the grip of the pole.
2. Adjust the length of the strap loop so that when you bring your hand down in the strap it lines up comfortably with the grip.

ADJUSTING POLE LENGTH

UPHILL SECTIONS
Shorten the poles so you are not overreaching.

DOWNHILL SECTIONS
Lengthen the poles to avoid bending over too much.

FLAT SECTIONS
Your arm should form a 90-degree bend at the elbow.

TRAVERSING A SLOPE
Shorten the pole on the uphill side and lengthen the pole on the downhill side.

⚠ WARNINGS

- This product is NOT intended to be the primary light source if hiking at night.
- The trekking poles are to be used for activities such as hiking, trekking, and mountain trekking only. DO NOT use for any other purposes.
- Metal tips can damage concrete, granite, tiles, and other surfaces. Please pay attention to surface type and condition when using.
- DO NOT place lateral (sideways) force on the pole shafts.
- Make sure that each section of the poles is securely locked before and during use.
- The trekking poles can break if bent more than 15 degrees. Avoid excessively bending the poles.
- If the trekking pole gets stuck (in a crack, between rocks, etc.), gently pull the pole out vertically. DO NOT wobble it or pull it out sideways by force.
- If you choose carbon trekking poles, protect the carbon shaft from impacting sharp objects, as that will create a weak point in the shaft.
- DO NOT use the trekking poles like ropes to pull people.
- The trekking poles and their parts/accessories are NOT toys. Avoid any possible injuries caused by them, particularly to children.
- Minors should use the trekking poles only under adult supervision.
- Trekking poles are to be used as an auxiliary balance aid only. To avoid accidents, DO NOT allow trekking poles to bear your full weight.
- DO NOT extend the poles beyond the STOP mark on any section.
- DO NOT dismantle or modify the product in any way.

DE BEDIENUNG

LICHT

AUFLADEN

Drücke den Schalter unter dem Akkupack und entferne den Akkupack. Stecke das USB-C Ladekabel ein, um den Ladevorgang zu starten.
Ladezeit: 4 Stunden

LEICHTE ABDECKUNGEN

Können für die Gewichtsreduktion anstatt Akkupacks verwendet werden.

BEWEGUNGSMODUS

2 Lichtfarben; 4 Lichteinstellungen; Standby nach 30 Sekunden; Speicherfunktion

AKTIVIEREN

Bei ausgeschaltetem Licht den oberen Schalter drücken, um das Licht einzuschalten und den Modus zu aktivieren.

AUSSCHALTEN

Den oberen Schalter drücken, um den Modus zu deaktivieren und das Licht auszuschalten.

ZWISCHEN DEN LICHTEINSTELLUNGEN WECHSELN

- Bei eingeschaltetem Licht den oberen Schalter gedrückt halten, um zwischen den 4 Lichteinstellungen zu wechseln: Neutralweiß (niedrig) Neutralweiß (hoch) - Rot - Rot blinkend. Den Schalter loslassen, sobald die gewünschte Lichteinstellung aktiv ist.
- Nach 30 Sekunden ohne Bewegung blinkt das Licht rot (20 Millisekunden an und 2 Sekunden aus) und kehrt dann zur zuletzt verwendeten Lichteinstellung zurück, sobald wieder eine Bewegung erkannt wird.
- Speicherfunktion: Bei der nächsten Aktivierung dieses Modus wird standardmäßig die zuletzt verwendete Lichteinstellung verwendet.

DAUERHAFTER MODUS

Nur neutralweißes Licht; stufenlose Helligkeitseinstellung; Speicherfunktion

AKTIVIEREN

Bei ausgeschaltetem Licht den oberen Schalter gedrückt halten, um das Licht einzuschalten und den Modus zu aktivieren.

AUSSCHALTEN

Den oberen Schalter drücken, um den Modus zu deaktivieren und das Licht auszuschalten.

HELLIGKEIT EINSTELLEN

- Bei eingeschaltetem Licht den oberen Schalter gedrückt halten, um die Helligkeit stufenlos einzustellen. Den Schalter loslassen, sobald die gewünschte Helligkeitsstufe erreicht wurde. Durch jedes erneute Gedrückthalten wird der Helligkeitszyklus umgekehrt (niedrig zu hoch vs. hoch zu niedrig).
- Durch einmaliges Blinken wird signalisiert, dass das Licht die höchste bzw. niedrigste Helligkeitsstufe erreicht hat.
- Speicherfunktion: Bei der nächsten Aktivierung dieses Modus wird standardmäßig die zuletzt verwendete Helligkeitsstufe eingestellt.

ZWISCHEN DEN MODI WECHSELN

Den Schalter Drücken, um den aktuellen Modus zu deaktivieren und das Licht auszuschalten. Im Anschluss den gewünschten Modus wie zuvor beschrieben aktivieren.

TREKKINGSTÖCKE

MONTAGE

1. Den Hebel öffnen und den Stangenteil herausziehen, bis die gewünschte Länge erreicht ist.
2. Den Hebel fest schließen.

DEMONTAGE

1. Den Hebel öffnen und den Stangenteil vollständig in den darüber liegenden Teil einschieben.
2. Den Hebel fest schließen.

EINSTELLUNG DER KLEMMSPANNUNG

1.Den Hebel öffnen.
2.Den Einstellregler im Uhrzeigersinn drehen, um die Klemmspannung zu erhöhen, oder gegen den Uhrzeigersinn, um sie zu verringern.

SO HÄLT MAN EINEN WANDERSTOCK

1. Die Hand durch den unteren Teil der Handschlaufe nach oben führen, dann den Gurt nach unten ziehen und den Griff der Stange greifen.
2. Die Länge der Handschlaufe so einstellen, dass die Hand beim Ablegen in der Schlaufe bequem am Griff anliegt.

DIE STANGENLÄNGE ANPASSEN

BERGAUF

Die Stangen kürzen, damit du nicht zu hoch greifst.

BERGAB

Die Stangen verlängern, damit du dich nicht zu gebückt gehst.

EBENE STRECKEN

Dein Arm sollte sich am Ellbogen um 90 Grad beugen.

EINE BÖSCHUNG ENTLANG GEHEN

Die Stange auf der bergauf gerichteten Seite kürzen und auf der bergab gerichteten Seite verlängern.

⚠ WARNUNGEN

- Dieses Produkt ist NICHT als primäre Lichtquelle für Nachtwanderungen gedacht.
- Die Trekkingstöcke dürfen nur für Aktivitäten wie Wandern, Trekking und Bergtouren verwendet werden. Bitte NICHT für andere Zwecke verwenden.
- Metallspitzen können Beton, Granit, Fliesen und andere Oberflächen beschädigen. Bitte achte bei der Verwendung auf die Art und Beschaffenheit der Oberfläche.
- Übe KEINE seitliche Kraft auf die Stange aus.
- Achte darauf, dass jeder Teil der Wanderstöcke vor und während der Benutzung sicher verriegelt ist.
- Die Trekkingstöcke können brechen, wenn sie um mehr als 15 Grad gebogen werden. Vermeide übermäßiges Biegen der Stöcke.
- Wenn der Trekkingstock stecken bleibt (in einer Ritze, zwischen Steinen usw.), ziehe den Stock vorsichtig senkrecht heraus. NICHT wackeln oder mit Gewalt seitlich herausziehen.
- Wenn du dich für Trekkingstöcke aus Carbonfaser entscheidest, schütze den Schaft vor dem Stoßen auf scharfe Gegenstände, da dies zu einer Schwachstelle im Schaft führt.
- Verwende die Trekkingstöcke NICHT wie Seile, um Personen zu ziehen.
- Die Trekkingstöcke und ihre Teile/Zubehörteile sind KEIN Spielzeug. Vermeide mögliche Verletzungen durch sie, insbesondere bei Kindern.
- Minderjährige sollten die Trekkingstöcke nur unter Aufsicht von Erwachsenen benutzen.
- Trekkingstöcke dürfen nur als Hilfsmittel für das Gleichgewicht verwendet werden. Um Unfälle zu vermeiden, dürfen die Trekkingstöcke NICHT mit dem gesamten Körpergewicht belastet werden.
- Verlängere die Stöcke an keiner Stelle über die STOP-Markierung hinaus.
- Das Produkt NICHT zerlegen oder in irgendeiner Weise verändern.

CARE AND MAINTENANCE

- After each use, pull the poles apart into separate segments, wipe each pole segment with a dry cloth, and then let them dry for 48 hours before reassembling and storing in a dry environment. If there is sand or other debris inside the tip and/or the shaft, pour it out before wiping the pole segments.
- DO NOT apply any chemicals, including lubricants or solvents.

LIMITED WARRANTY

TREKKING POLES

For one year following purchase unless otherwise indicated by law, we will warrant to the original retail buyer only that our products are free from defects in materials and workmanship as originally sold. If you receive a defective product, return it to us, and we will replace it subject to the following conditions: We do not warrant products which show normal wear and tear or that have been used or maintained improperly, modified or altered, or damaged in any manner.

BATTERY PACKS

Obuy's 2-year warranty

Global Customer Support

cs@obuy.com

Shenzhen Obuy Technology Co., Ltd

5th Floor, Building A2, Fuhai Information Harbor, FuYong Town, Bao'an District, Shenzhen, China

THANK YOU!